


RADIO AND PLAYER

FROM POWER SOURCE SYSTEM (SEE PAGE 44)

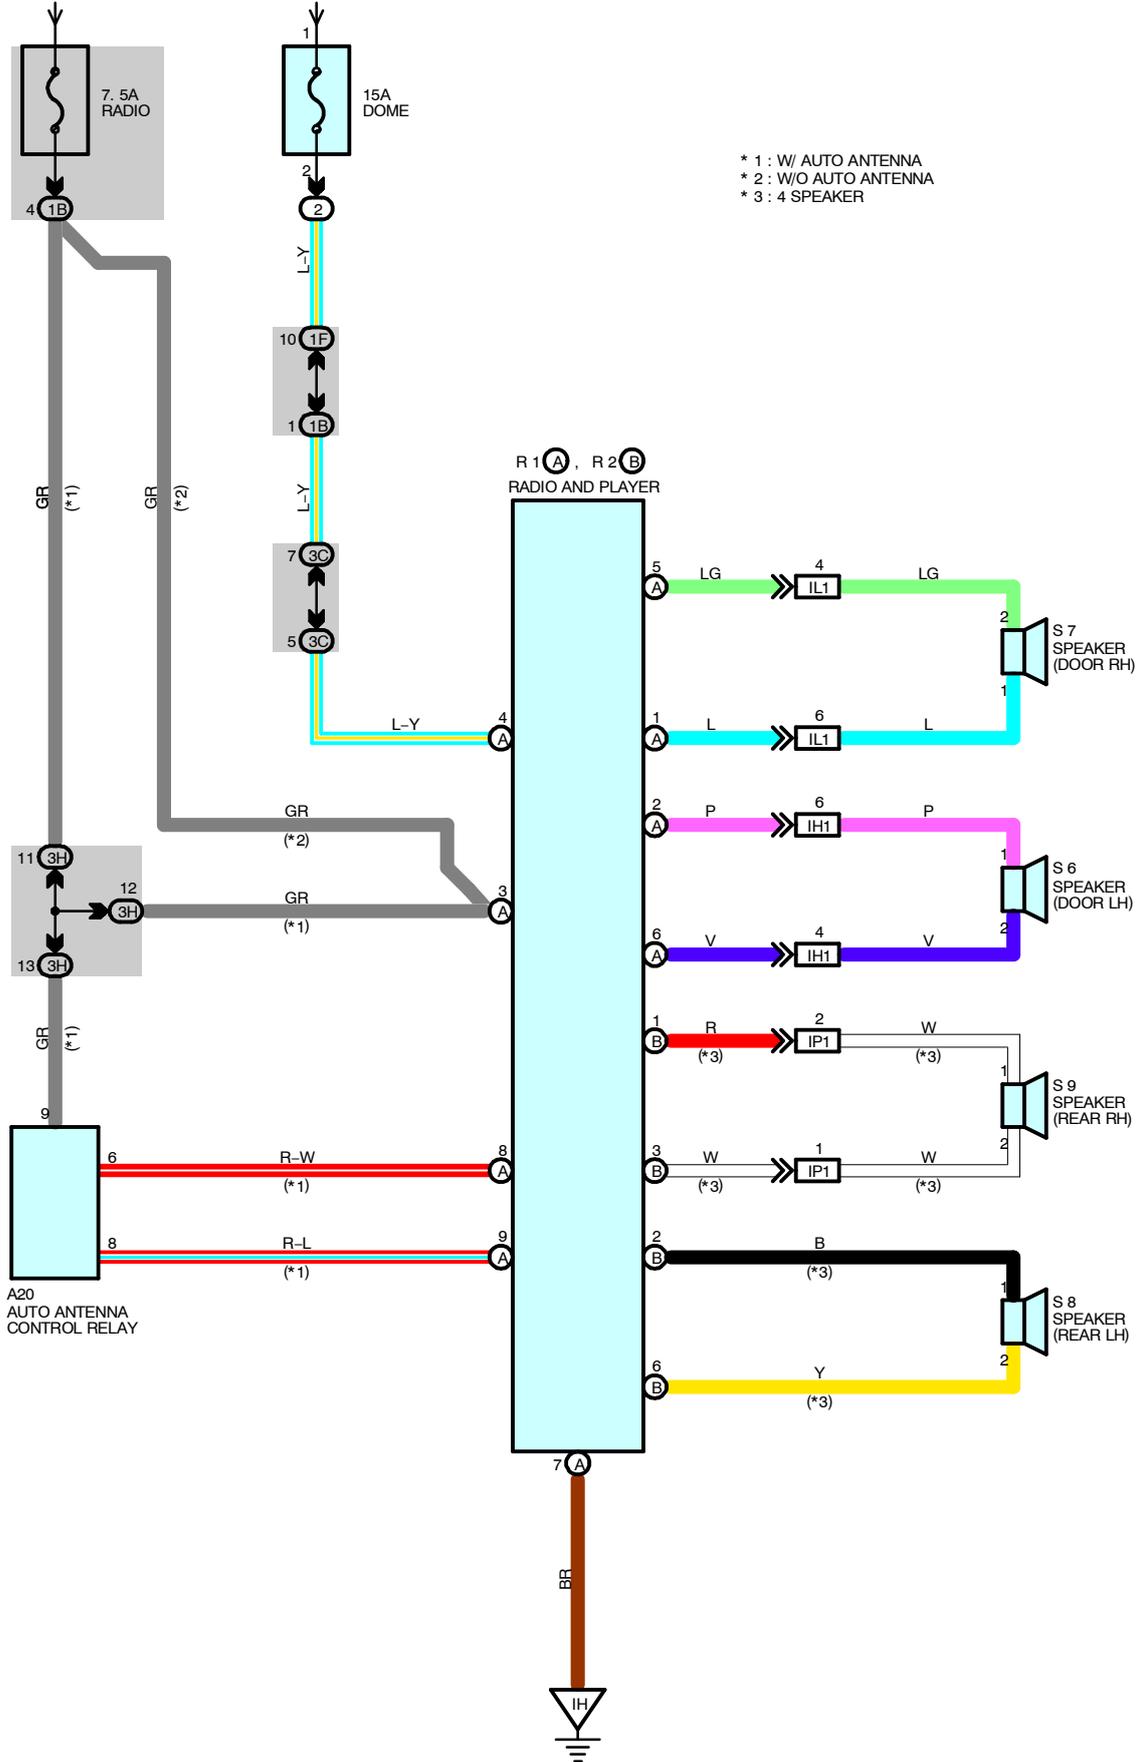

SERVICE HINTS

R1 (A) RADIO AND PLAYER

- (A) 3-GROUND : Approx. **12** volts with ignition SW at **ON** or **ACC** position
- (A) 4-GROUND : Always approx. **12** volts
- (A) 7-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A20	30	S6	32	S9	32
R1	A	S7	32		
R2	B	S8	32		

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	19	R/B No.2 (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	20	Cowl Wire and J/B No.1 (Lower Finish Panel)
1F	20	Engine Room Main Wire and J/B No.1 (Lower Finish Panel)
3C	22	Cowl Wire and J/B No.3 (Behind the Instrument Panel Left)
3H	24	Cowl Wire and J/B No.3 (Behind the Instrument Panel Center)


□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IH1	38	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IL1	38	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IP1	38	Floor No.3 Wire and Floor No.3 Wire (Behind the Radio and Player)

▽ : GROUND POINTS


Code	See Page	Ground Points Location
IH	38	Right Kick Panel

 A20




R1 (A)

 (w/ Auto Antenna) BLUE




R1 (A)

 (w/o Auto Antenna) BLUE



R2 (B)

 (4 Speaker)



S6, S7, S8, S9

